


# ARTHA V2

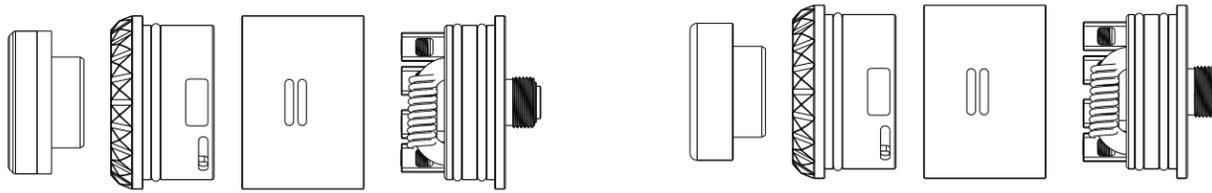

Thank you for purchasing Advken ARTHA V2 RDA . The RDA is for vaporizing and inhaling e-liquid. Please observe the e-liquid's warnings before your first use. Also, please read the enclosed manual carefully before use to make sure all steps are correct. If you need any additional information or have any query about this product or its use, please contact your local Advken agent or visit Advken website: [www.advken.com](http://www.advken.com).

## Specification:

Product Name: ARTHA V2 RDA  
Material: 304 stainless steel  
Size: 24mm \*29mm (with Drip Tip)  
Color Options: SS/Gun-metal  
Thread: 510 Thread  
Pin: Gold -plated Contact Pin  
G.W.(G): 84  
N.W.(G): 40

## Features:

1. Dual 810 Drip Tip
2. Diamond Pattern Adjustable Airflow Top Cap
3. Quadruple Posts with Big Hole
4. PVD Black Plated Deck
5. Deep Juice Well
6. Gold Plated Contact Pin
7. Come with Squonk Pin


## Operation Guide:

1. Prepare a pre-build coil, tighten it on the deck and cut the excessive ends and make adjustment for its location.
2. Put the cotton strip through the coil, and cut the excessive ends.
3. Wet the cotton with your e-liquid and make sure the cotton is totally soaked before use.
4. Screw back the chamber and top cap with the deck tightly.

Warning: Coils' resistance must be checked before used and re-checked periodically.

## How to Refill Tank:

Hold the RDA hand upside or screw down it with a mod. Then screw the top cap to open it, you can find cotton inside and fill it with proper amount e-liquid. After that , screw the top cap closed well.

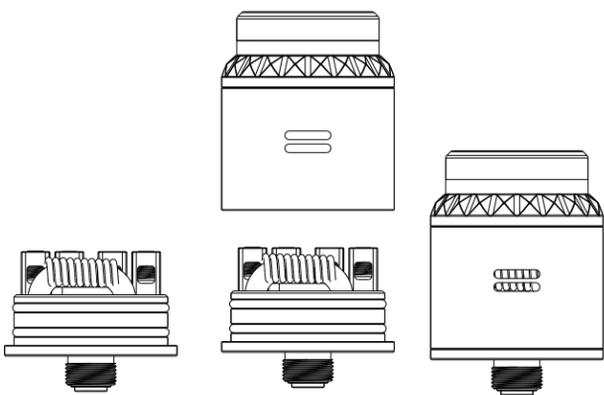

## How to VAPE:

Screw down the Artha V2 with a mod well, make sure contact is OK. Then press the fire button as long as you inhale from the drip tip, then release the button.

## Note:

1. Please drip a few drops of e-liquid into the coils and let the RDA stand a few minutes to make sure the coils soak enough before the first use.
2. Please refill the RDA in-time to avoid dry-burning.
3. Protect this device from direct sunlight, heat, moisture and mechanical impact.
4. The device must not be cleaned under running water! Use only a damp, lint-free cloth for external cleaning.

## Verification:

Scratch off the cover of the security label on the box to get the anti-fake codes. Then fill the codes into the input box on the [www.advken.com](http://www.advken.com) to verify. Finally, the results will come out later.

## Warning:

This products isn't intended to use by persons under legal smoking age, nonsmokers, women who are pregnant or breastfeeding, or persons with or at risk of heart disease, high blood pressure, diabetes, or taking medicine for depression or asthma.