

Report No.: TCT190412C010 Date: Apr. 19, 2019 Page No.: 1 of 6

Applicant: Shenzhen Advken Technology Co.,Ltd

Address: F5, Building A, Weiye Chuangxin Yiba Industrial Park, Gushu, Xixiang,

Bao'an District, Shenzhen

The following sample was submitted and identified by/on behalf of the client as:

Sample Name: Wanderlust lite

Model No.: ABG-04
Tank: Cr-Fe-Al

Coil: 1.2Ω

Power level in testing: Voltage/Wattage of tested sample is un-adjustable

Adjustable air inlet or not: Yes

Trade Mark: ADVKEN
Sample Received Date: 2019.04.12

Testing Period: 2019.04.12—2019.04.19

Test Method: Please refer to the following page(s).

Test Result(s): Please refer to the following page(s).

			120	
Tes	st Items			Test Requested
1	Carbonyl Compounds: Formaldehyo	do Acotaldobydo Acroloin	Crotonaldohydo	Emission testing
	Carbonyi Compounds. i ormaidenyo	de, Acelaiderryde, Acroleiri,	Crotorialderryde	according to
2	Metals: Aluminum, Chromium, Iron, Nickel, Tin, Lead, Cadmium, Arsenic, Antimony			Article 20 of
	Metals. Aluminum, Chromium, non,	Tobacco Product		
2	Nigoting consistency			Directive
3	Nicotine consistency			(2014/40/EU)

Checked by

Noel Yin

Signed for and on behalf of TCT

Kim Zhang

Technical Manager





Report No.: TCT190412C010 Date: Apr. 19, 2019 Page No.: 2 of 6


Test Results:

Test Condition for test items except Nicotine consistency test:

With reference to the CORESTA RECOMMENDED METHOD N° 81 method parameter, Afnor standardization XP D90-300-3, International Standard ISO 20768:2018 and PD CEN/TR 17236:2018, a smoke machine was used to collect the vapor.

Puff Duration	3.0s±0.1s			
Puff Volume	55mL±0.3mL			
Puff Frequency	30s±0.5s			
Puff of Each Group	20			
Group Interval Time	300s±120s 18.5mL/s±1.0mL/s < 50hPa 5			
Maximum Flow				
Pressure Drop				
Group				
Total Number of Puff	100			
Pressure Drop Group	300s			

The temperature and relative humidity of the test atmosphere during machine preparation and testing were kept within the following limits: temperature $\pm 2^{\circ}$ C, relative humidity $\pm 5\%$

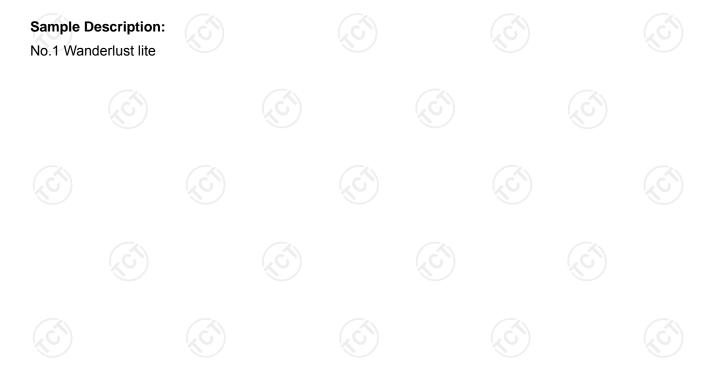

1B/F., Building 1, Yibaolai Industrial Park, Qiaotou, Fuyong, Baoan District, Shenzhen, Guangdong, China Hotline: 400-6611-140 Tel: 86-755-27673339 Fax: 86-755-27673332 http://www.tct-lab.com



Report No.: TCT190412C010 Date: Apr. 19, 2019 Page No.: 3 of 6

1. Carbonyl Compounds Content(s)

Method: The volatile aldehydes are extracted from the aerosol by bubbling each puff through an impactor containing an acidified aqueous solution of 2,4-DNPH. The samples are analyzed by reverse phase high-performance liquid chromatography and determined using a UV detector.

Test Item	CAS No. Unit	Unit	MDL	LOQ	Content(s)		
rest item		Unit			No.1		
Formaldehyde	50-00-0	ug/100puffs	0.667	2	9.14		
Acetaldehyde	75-07-0	ug/100puffs	0.667	2	5.79		
Acrolein	107-02-8	ug/100puffs	0.667	2	ND		
Crotonaldehyde	4170-30-3	ug/100puffs	0.667	2	ND-		

Note: - ug = Microgram

- ND = Not Detected (lower than MDL)

- MDL = Method Detection Limit

- LOQ = Limit of Quantitation

- E-Liquid Used: E-liquid B (AFNOR XP D90-300-3)





Report No.: TCT190412C010 Date: Apr. 19, 2019 Page No.: 4 of 6

2. Metals Content(s)

Method: The vapor was passed through a dry-ice cooled impinger containing glass packing beads and quartz wool. After smoking the impinger was extracted with 5% nitric acid and filtered through quartz wool. An aliquot of the resulting solution was submitted for analysis by ICP-OES.

Toot Itors	CACAL	Mait	MDI	MDL LOQ	Content(s)		
Test Item	CAS No.	Unit MDL	MDL		No.1		
Aluminum(Al)	7429-90-5	ug/100puffs	0.025	0.25	ND ND		
Chromium(Cr)	7440-47-3	ug/100puffs	0.005	0.05	ND ND		
Iron(Fe)	7439-89-6	ug/100puffs	0.005	0.05	ND		
Nickel(Ni)	7440-02-0	ug/100puffs	0.025	0.25	ND		
Tin(Sn)	7440-31-5	ug/100puffs	0.25	2.5	ND		
Lead(Pb)	7439-92-1	ug/100puffs	0.025	0.25	ND		
Cadmium(Cd)	7440-43-9	ug/100puffs	0.005	0.05	ND		
Arsenic(As)	7440-38-2	ug/100puffs	0.025	0.25	ND ND		
Antimony(Sb)	7440-36-0	ug/100puffs	0.025	0.25	ND		

Note: - ug = Microgram

- ND = Not Detected (lower than MDL)

- MDL = Method Detection Limit

- LOQ = Limit of Quantitation

- E-Liquid Used: E-liquid B (AFNOR XP D90-300-3)

1B/F., Building 1, Yibaolai Industrial Park, Qiaotou, Fuyong, Baoan District, Shenzhen, Guangdong, China
Hotline: 400-6611-140 Tel: 86-755-27673339 Fax: 86-755-27673332 http://www.tct-lab.com



Report No.: TCT190412C010 Date: Apr. 19, 2019 Page No.: 5 of 6

3. Nicotine Consistency Test

Test Condition: With reference to the CORESTA RECOMMENDED METHOD N° 81 method parameter and Afnor standardization XP D90-300-3, a smoke machine was used to collect the vapor.

Puff Duration	3.0s±0.1s			
Puff Volume	55mL±0.3mL			
Puff of Each Group	20			
Maximum Flow	18.5mL/s±1.0mL/s			
Pressure Drop	< 50hPa			

The temperature and relative humidity of the test atmosphere during machine preparation and testing were kept within the following limits: temperature $\pm 2^{\circ}$ C, relative humidity $\pm 5\%$

Method: A reference liquid was prepared. A pharmaceutical nicotine inhaler was used as a comparator. Products were attached to a smoke machine, and the aerosol was collected in Cambridge filter pads. After trapping and solvent extraction, solution was analyzed by GC-MS and nicotine was dosed by comparing the areas obtained on the MS detector with those of standard solutions prepared in the laboratory under concentration conditions surrounding those of the samples.

Sample No	Nicotine(CAS No.:54-11-5) Contents(mg/20Puffs)						Total
Sample No.	Group 1*	Group 2	Group 3*	Group 4	Group 5*	AVG	(mg/100puffs)
No.1	0.815	0.815	0.775	0.755	0.787	0.789	3.95
Deviation(%)	3.2	-	1.8	-	0.3	1	

Note: - mg = milligram

- ND = Not Detected (lower than MDL)
- MDL = Method Detection Limit = 0.01mg/20Puffs
- LOQ = Limit of Quantitation = 0.1mg/20Puffs
- 1group = 20puffs
- * Values used for determination of consistency of nicotine emission
- E-Liquid Used: E-liquid A (AFNOR XP D90-300-3)
- Under the conditions of the test and with reference to AFNOR XP D90-300-3, the electronic cigarette delivers a dose of nicotine at consistent levels.



Report No.: TCT190412C010 Date: Apr. 19, 2019 Page No.: 6 of 6

Photo(s) of the sample(s)



Wanderlust lite



Remark: This report is considered invalidated without the Special Seal for Inspection of the TCT. This report shall not be altered, increased or deleted. The results shown in this test report refer only to the sample(s) tested. Without written approval of TCT, this test report shall not be copied except in full and published as advertisement.

